


Module Nos.240


Model: DW-5000C, DW-5200C, DW-5400C, DW-5500C

[Reading the display]


[Regular timekeeping mode]

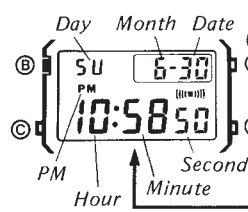


[Stopwatch mode]

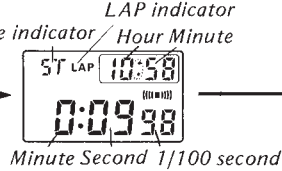

[Countdown alarm mode]

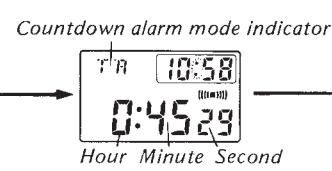

[Daily alarm mode]

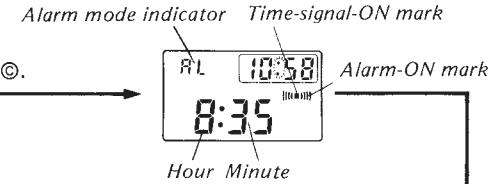


[Changeover between 12/24 hour formats]

In regular timekeeping mode, with every push of (A), the display is switched between 12/24 hour formats.

[Stopwatch operation]

A signal confirms start/stop operation. A signal sounds at 10-minute intervals.

(Working range) The stopwatch display is limited to 59 minutes 59.99 seconds. Thereafter it can be reset and started again.

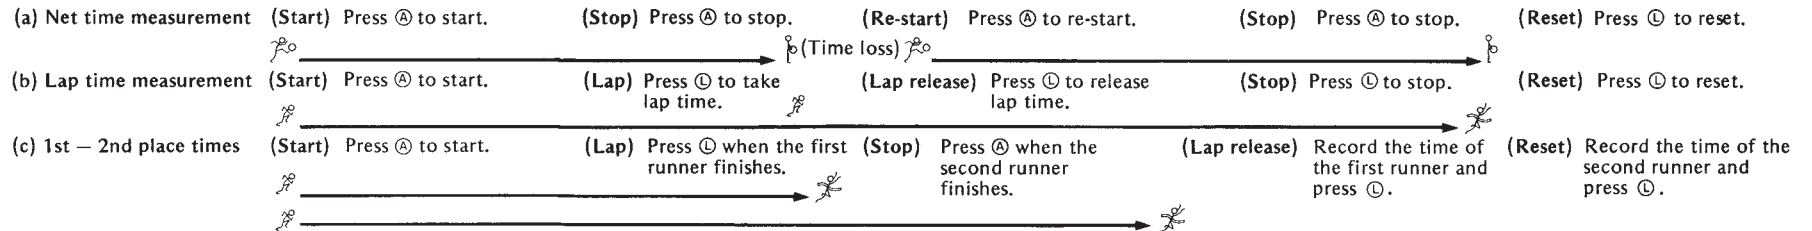


[Countdown alarm operation]

The countdown can be set from one minute to 11 hours 59 minutes, and times to an accuracy of one second. Start/stop operation is possible by pressing the (A) button and is confirmed by a signal. A signal sounds at 10-minute intervals. When the display reaches zero, the buzzer will sound for 30 seconds unless the (C) button is pressed.

(Repeat function) When the display is stopped, the pre-entered time is retrieved by pressing the (C) button.

[Countdown alarm display]

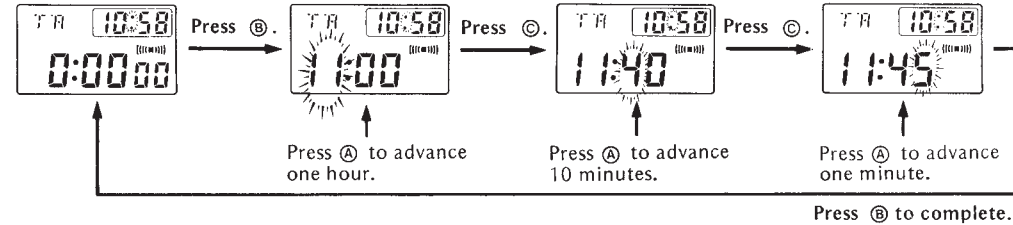


[Setting daily alarm time]

Every time the (C) button is pressed in the alarm time display, the alarm-ON-mark (■) appears or disappears. When the alarm-ON-mark is lit, the buzzer sounds for 30 seconds at the preset time every day until cleared. To stop the buzzer while sounding, press the (C) button.


(Setting the time signal) Every time the (A) button is pressed in the alarm time display, the time-signal-ON-mark (■) appears or disappears. When the time-signal-ON-mark is lit, the watch sounds every half hour on the half hour with a "Bip" signal, and sounds every hour on the hour with a "Be-e-ep" signal, regardless of the preset alarm time.

(Sound demonstration) While both (A) and (C) buttons are pressed simultaneously, the buzzer sounds.

[Alarm time display]

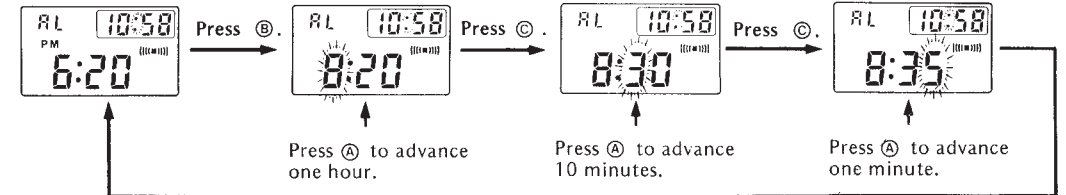

[Setting time and calendar]

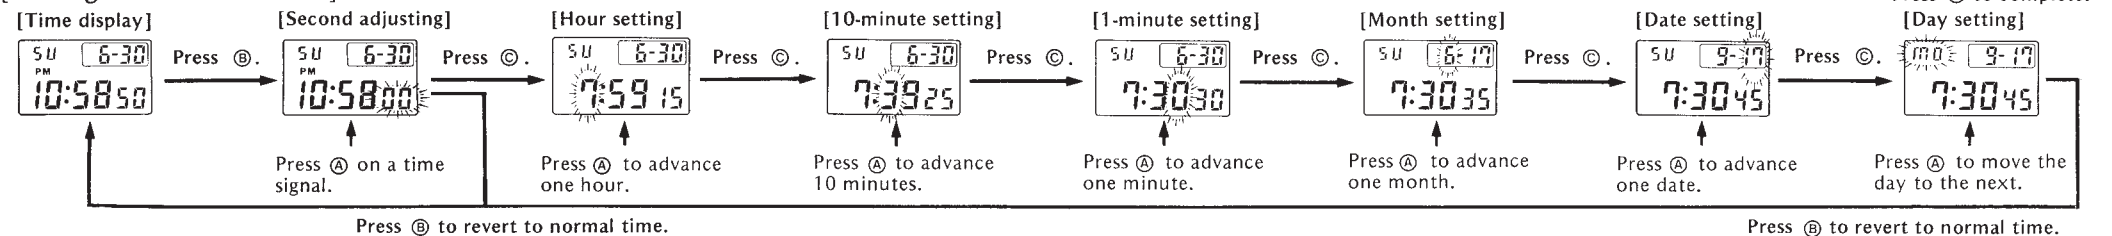

(Independent correction) Correction of any digit, if not required, can be skipped by pressing the (C) button repeatedly.

(Reversion to normal time display) The watch reverts to the normal time display if the (B) button is pressed, regardless of the digit setting mode.